

NO-Drilling Bracket

Attach your Licence Plate without drilling holes in your car




The drivers favourite – styles to fit most vehicle makes & models

* Made from extremely durable high quality polycarbonate - Fittings Included *

Fitting Instructions

1. Remove your number plate.
2. Place MOGO Bracket behind number plate and replace on vehicle using existing fittings.
3. Attach included foam pads to the rear of the bracket to minimise contact with vehicle bodywork.

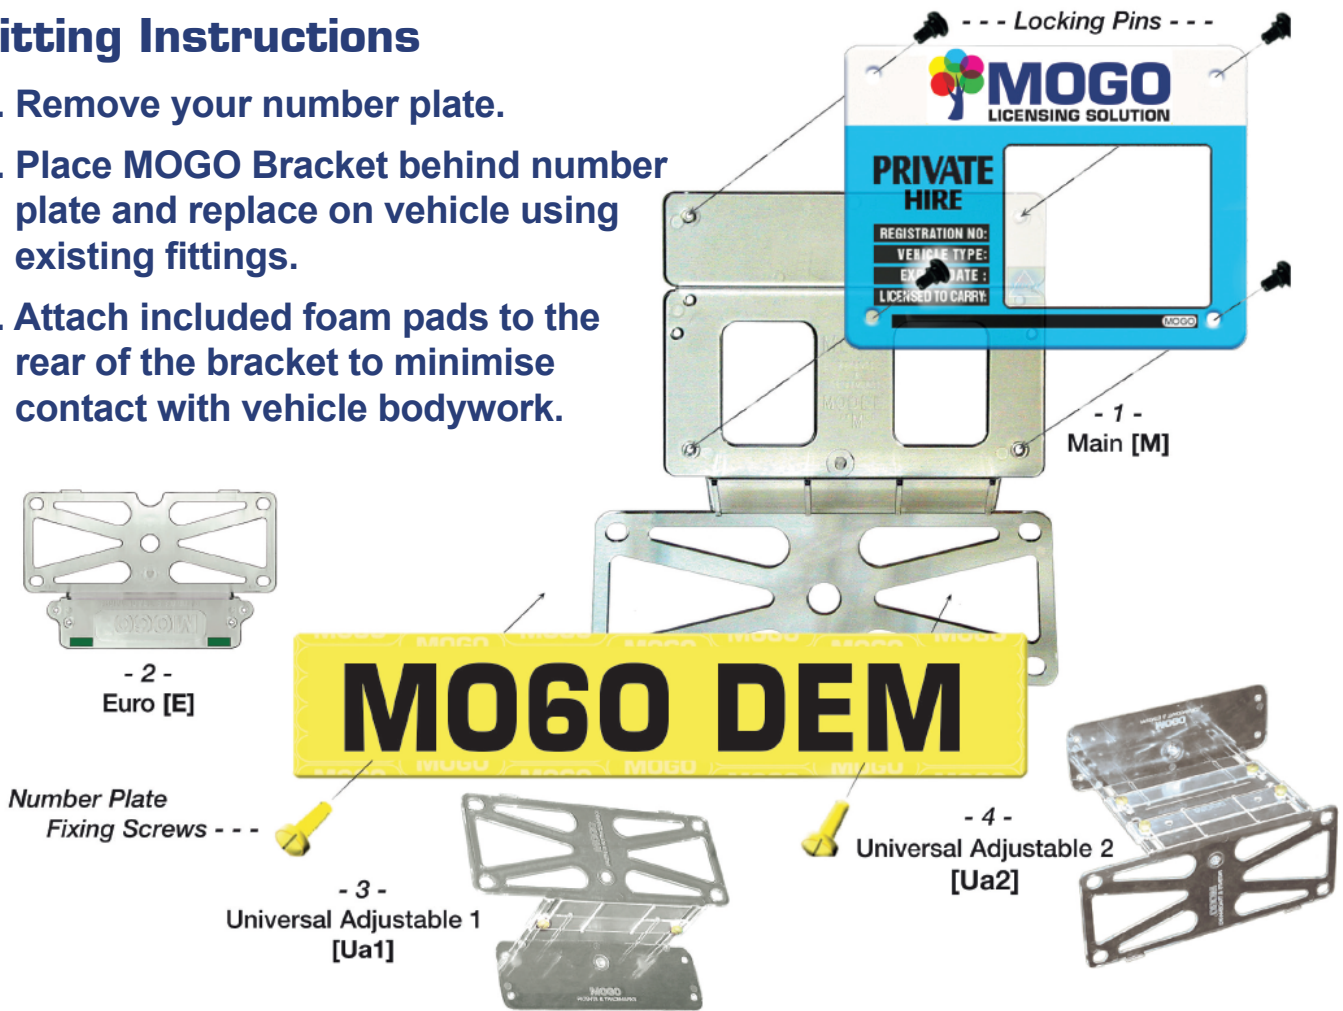

Also available for long plates in standard fit or adjustable.

Fixing Licence Plate to MOGO Bracket

Line up holes in your MOGO Licence Plate with those in the MOGO bracket.

Attach firmly by pushing the supplied locking pins through the paired holes so they can't be pulled out